

WHY CHOOSE GAST?

NEARLY A CENTURY OF QUALITY AIR-MOVING HISTORY

Since 1921, Gast Manufacturing, Inc. has been a leader in the design and manufacturing of quality air-moving products. We specialize in offering cost effective solutions for a wide variety of industries including industrial manufacturing, healthcare, and environmental cleanup applications.

COMPREHENSIVE PRODUCT PORTFOLIO

Gast's wide array of pneumatic products include vacuum pumps, compressors, air motors, gear motors, vacuum generators and regenerative blowers - all tailored to meet the many challenging applications of OEMs and end users worldwide Our products are trusted to operate in critical applications, due to their advanced performance and durability. To virtually eliminate downtime, they're also designed for ease of serviceability and many are equipped with dual-voltage motors making them the most versatile products in the industry.

LEADING THE INDUSTRY


Gast has extensive knowledge of the pneumatic industry and our customer's needs continually drive the development of new and innovative products. With the expertise of our engineers and designers, we're able to help identify and implement optimal products for each of our customers' specific applications.

COMMITTED TO **CUSTOMER SERVICE**

Gast and its global distribution network provide the support and service our customers can count on. From initial inquiry through dedicated after sales support, Gast can be counted on to be there when needed. Additionally, OEM customers are also assigned dedicated customer service and account managers, along with product and service training.

STATE OF THE ART **PNEUMATICS LAB**

Our industry leading pneumatics lab provides a full range of onsite product testing capabilities. Our engineering group has access to state of the art data acquisition tools, enabling them to solve the most difficult customer problems. We use our capability not only to continually improve our own product, but we actively work with our customers to provide assistance as they develop their own new products.

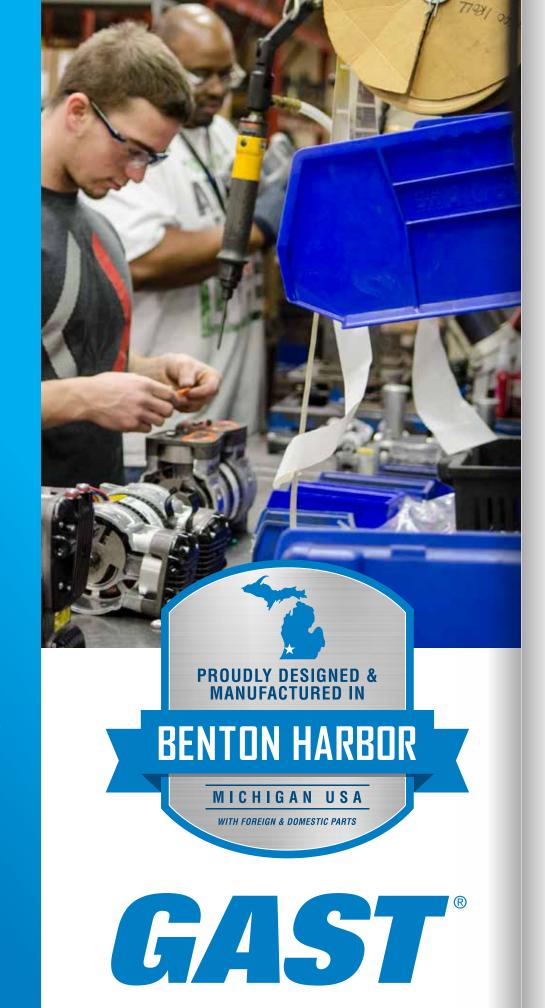

Performance Overview

Air Motors/ Gearmotors



- Variable speed
- Non-electrical sparking
- Cool running • Compact, portable
- · Mount in any position

Oilless or lubricated

Pulse-free air delivery

Extra quiet AT Series

Low vibration



Maximum

Speed



Maximum Maximum

Maximum Pressure

Maximum

Power

Speed

Torque

125

112 190

Maximum

Torque

5200

587

Diaphragm

Rotary Vane



- Oilless
- Quiet operation
- · Compact, lightweight High efficiency Corrosion resistant

Piston



- Oilless
- Rugged construction
- Corrosion resistant



Rocking Piston



- Oilless Quiet operation
- Liahtweiaht
- Corrosion resistant





Regenerative **Blowers**



- Oilless
- Mount in any position
- Continuous, non-pulsating air flow





Vacuum Generators



- Compact, lightweight
- Quiet operation Low air consumption
- No moving parts
- High efficiency

27



Tank **Systems**



- Oilless
- Quiet operation
- · Instantaneous supply of pressure/vacuum





2 **GAST**° www.gastmfg.com



Compressed air into an air motor forces the sliding vanes out of the eccentric-mounted rotor. An extended shaft on the rotor spins to perform the work.

Air Motors/ **Gear Motors**

Typical Applications

- Mixing equipment
- Conveyor drives
- Pump drives
- Food packaging
- Pharmaceutical packaging
- Hoists and winches
- Hose reels
- Fiberglass choppersTension devices
- Turntables



- Modular design (MVP)
- Available in lubricated or non-lubricated models
- Variable speed
- Non-electrical sparking
- Cool running
- Compact and portable
- Operate in all positions
- Mounting flexibility -hub, foot, face, NEMA C-Flange, or Metric D Series interface mountings and clockwise, counter-clockwise, or reversible rotations
- Four and eight vane models also available
- Air powered gearmotors are available in right-angle and in-line models
- A full line of recommended accessories available

Specifications

_											
	Model/Series	Maximum Speed	Output Power		Torque		Max Air Co	onsumption	Maximum Speed	Maximum Torque	
	wodel/Series	rpm	hp	kW	lb. in.	Nm	CFM	m³/h	rpm	lb. in.	Nm
	1AM (A)	10,000	0.45	0.33	2.75	0.31	20.5	35.1	650	5.6	0.65
	1UP (B)	6,000	0.45	0.33	5.25	0.58	27	47	500	6.00	0.68
Standard Air Motors	2AM (A)	3,000	0.93	0.68	19.50	2.20	30	49.5	350	26.1	3.05
	4AM (A)	3,000	1.70	1.30	36.00	4.1	78	132.5	300	56.00	6.3
	6AM (A)	3,000	4.00	3.00	84.00	10.00	128	228	300	115.00	13.00
	8AM (A)	2,500	5.25	3.90	132.00	14.40	175	293	300	185.00	21.00
	16AM (A)	2,000	9.50	7.10	290.00	34.00	275	475	300	372.00	43.00

		· ·	· · · · · · · · · · · · · · · · · · ·		_							
	Model/Series	Gear Ratio	Maximum Speed	Line Pressure	Output	Power	Tor	que	1	um Air mption	Maximum Torque	
			rpm		hp	kW	lb. in.	Nm	CFM	m³/h	lb. in.	Nm
	MVP02	-	3,500	1.0	0.75	23.00	2.60	46	78.00	500	25	2.82
	MVP03	-	3,500	1.60	1.19	29	3.28	60	102.00	500	35	4
MVP	MVP05	-	3,500	3.00	2.24	49	5.50	84	143.00	500	69	7.8
Air Motors	MVP06	-	3,500	4.00	2.98	68	7.68	98	167.00	500	95	10.73
	MVP02 (GM)	19:1	150	1.00	0.75	340	38.40	46	25	25	375	42.4
	MVP05 (GM)	9:1	400	3.00	2.24	480	54.23	77	28	28	605	68.36
	MVP05 (GM)	15:1	450	3.00	2.24	330	37.28	93	30	30	960	108.46
	MVP06 (GM)	20:1	325	4.00	2.98	800	90.38	125	25	25	1450	163.82
	1AM-NRV	15:1	350	А	0.34	0.26	62	7.1	21.0	36	72	8.1
	1UP-NRV	15:1	400	С	0.32	0.23	49	5.5	2	36	71	8.0
	4AM-RV	10:1	300	В	1.26	0.94	274	31.0	57.5	98	425	48.0
Coon Motous	4AM-RV	15:1	200	В	1.25	0.90	400	45.2	60.0	102	640	72.0
Gear Motors	4AM-70C	20:1	150	А	1.17	0.87	487	55.0	71.0	120	740	83.6
	4AM-70C	40:1	75	А	0.95	0.71	800	90.4	71.0	120	1255	141.8
	4AM-70C	60:1	50	А	0.82	0.61	1040	117.5	71.0	120	1640	185.3
	16AM-13	20:1	100	А	6.50	4.85	4175	471.8	275.0	468	5175	584.8



Rotary Vane

Typical Applications

- Breathing air supply
- Circulation therapy
- Packaging
- Graphic arts
- Pond aeration
- Vacuum hold-down
- Air sampling
- Office/business machines
- Food processing equipment
- Laboratory use
- Soil sparging
- Vacuum forming Air bearings





Sliding, flat vanes in an eccentricmounted rotor are flung outward against the bore of the pump to generate pressure and vacuum in a rotary vane pump.

- Oilless or lubricated models
- Dual function styles available
- Low vibration
- Pulse-free air delivery
- Extra quiet AT Series
- Long, service-free life
- Simplex and duplex vacuum tank systems (2 to 60 gallon tank)
- Electric motors are dual frequency, multi-voltage AC for worldwide applications, with models rated 12 and 24 volts DC
- A complete line of accessories available

Specifications

		Power	Rating		Free Ai	ir Flow		Maximum Press		Maximun	n Vacuum
	Model/Series	60	Hz	CF	М	m3	3/h	noi	bar	inHg	mhor
		hp	kW	50 Hz	60 Hz	50 Hz	60 Hz	psi	Dar	iiing	mbar
	1531 24V BLDC	1/10	0.07	1.7	1.7	2.9	2.9	10	0.7	25	167
	1531	1/10	0.07	1.25	1.5	2.12	2.5	15	1.0	20	335
	0532	1/15	0.05	.29	.6	0.49	1.0	15	1.0	20	335
Motor Mounted Models	1032	1/15	0.05	.92	1.1	1.56	1.9	10	0.7	20	335
	1532	1/10	0.07	1.3	1.5	2.2	2.5	10	0.7	20	335
	2032	1/8	0.09	2.0	2.4	3.4	4.1	10	0.7	26	133
	3032	1/6	0.12	2.4	2.6	4.1	4.4	10	0.7	26.5	116
	0211	1/6	0.12	1.1	1.3	1.9	2.2	20	1.4	20	335
	*0323-1423 (6 models)	1/4 - 1	0.19-0.56	2.7-11.5	3.2-13	4.6-19.5	5.4- 22	10	0.7	26.5	116
	*AT03 - AT05	1/4	0.19	3.8- 4.8	-	-	6.5- 8.2	5	0.4	24	150
	0533	1/15	0.05	0.5	0.6	0.85	1.0	15	1.0	20	335
	1033	1/10	0.07	0.9	1.1	1.53	1.9	15	1.0	20	335
	1034	1/6	0.13	-	1.6	-	2.7	10	0.7	20	335
	1534	1/6	0.13	-	2.2	-	3.7	10	0.7	20	335
Separate Drive	0740	1/4 - 1/3	0.19 - 0.25	1.5 - 4.9	1.9 - 6.0	2.5 - 8.3	3.2 - 10	10	0.7	20	335
Models	1550	3/4	0.56	11.5	14.5	19.5	24.7	15	1.0	20	335
	1065-2565	1/2 - 1 1/2	0.37 - 1.1	7.3 - 16.5	8.5 - 21	12 - 28	4.4 - 35.7	25	1.7	28	65
	2067-2567	1 - 1 1/2	0.75 - 1.1	14 - 17	17 - 21	24 - 29	29 - 35.7	15	1.0	28	65
	3040	2	1.5	31	40	53	68	10	0.7	20	335
	6066	5	3.7	45	55	76	93.5	15*	1.0	25	167

* Standard model performance. Soil sparging model capable of 20 psi

4 **GAST**° www.gastmfg.com www.gastmfg.com **GAST**° 5





In reciprocating motion, with a short stroke, the diaphragm at the top of the connecting rod flexes up and down in a closed chamber, creating pressure or vacuum.

Diaphragm/ Miniature

Typical Applications

- Blood analysis
- Respirators/nebulizers
- Vacuum pad hold-down
- Dental/surgical
- Automobile cruise controls
- Graphic arts equipment
- Air and gas analysis
- Breast pumps
- Sterilizers
- Air brushes
- Agricultural foam markers Oil atomizers
- Lab equipment
- Oilless
- Rugged construction
- Quiet
- Cooler air output
- Easy maintenance • Compact, lightweight
- Corrosion resistant
- Low power consumption
- Standard, twin, and miniature styles
- · Electric motors available in dual frequency, shaded pole, and permanent split capacitor (psc) versions as well as AC multi- voltages for worldwide applications
- 4 24 volt DC options on the miniature styles

Specifications

		Power	Rating	Free Air Flow	Maximum	Pressure	Maximum Vacuum		
	Model/Series	60	Hz	LPM		hau	inlla		
		hp	kW	LPW	psi	bar	inHg	mbar	
Standard Diaphragm Models	MOA (AC/DC)	1/8	0.09	1.36	50	3.5	24	200	
__	MAA (AC)	1/8	0.09	2.68	50	3.5	28.5	48	
	DOA (AC/DC)	1/3	0.25	3.32	60	4.2	25.5	150	
	DAA (AC)	1/15	0.37	6.46	60	4.2	29	31	
	10D (AC)	-	-	3.8	15	1.0	15	505	
	15D (DC)	-	-	4.3	15	1.0	14	526	
Miniature	15D (AC)	-	-	7.0	24	1.9	20	335	
Diaphragm Models	15D (DC)	-	-	7.0	20	2.0	20	335	
	22D (AC)	1/20	0.04	26.3	25	1.7	23	234	
	22D (DC)	1/8	0.09	36.8	25	1.7	22.5	251	



Piston

Typical Applications

- Cable pressurization
- Tire inflators
- Air suspension
- Beverage dispensing
- Door closures
- Pneumatic temperature controls
- Power spraying
- Spray paintingMedical/dental clinics





In reciprocating motion,

the piston moves up and

down or back and forth

pressure or vacuum.

inside a cylinder creating

- Rugged construction
- · Long, service-free life
- Corrosion resistant
- Motor-mounted or separate drive styles
- Dual frequency, AC multi-voltage, 12 and 24 volt DC options also available
- Tank-mounted piston compressors come in simplex and duplex styles and in tank sizes ranging from 2 to 60 gallons
- A complete line of recommended accessories also available

Specifications

		Power	Rating		Free A	ir Flow		Maximun	n Pressure	Maximum Vacuum	
	Model/Series	60	Hz	C	FM	m	3/h	:	han	intte	
		hp	kW	50 Hz	60 Hz	50 Hz	60 Hz	psi	bar	inHg	mba
	1L	1/6	0.12	1.5	1.5	2.55	2.55	50	3.5	-	-
	2L	1/4	0.19	2.4	2.4	4.1	4.1	50	3.5	-	-
	3L	1/3	0.25	3.1	3.1	5.3	5.3	50	3.5	-	-
	4L	1/2	0.37	4.5	4.5	7.7	7.7	50	3.5	-	-
	5L	3/4	0.56	5.4	5.4	9.2	9.2	50	3.5	-	-
	6L	1	0.74	6.3	6.3	10.7	10.7	50	3.5	-	-
	7L	1 1/2 - 2	1.1 - 1.5	10.2	10.2	17.3	17.3	50	3.5	-	-
Standard	8L	2	1.5	9.1	12.4	15.5	20.7	50	3.5	-	-
Motor Mounted	1H	1/6	0.12	1.3	1.3	2.2	2.2	100	7.0	-	-
Models	2H	1/4	0.19	2.1	2.1	3.6	3.6	100	7.0	-	-
	3H	1/3	0.25	2.4	2.4	4.1	4.1	100	7.0	-	-
	4H	1/2	0.37	3.5	3.5	6.0	6.0	100	7.0	-	-
	5H	3/4	0.56	4.7	4.7	8.0	8.0	100	7.0	-	-
	6H	1	0.74	5.4	5.4	10.7	9.2	100	7.0	-	-
	7H	1 1/2 - 2	1.1 - 1.5	9.1	9.1	15.5	15.5	100	7.0	-	-
	8H	2	1.5	11	11	18.7	18.7	100	7.0	-	-
	IVAF	1/6	0.12	1.49	1.80	2.53	3.06	-	-	27.5	82
	4VSF	1/2	0.37	3.38	4.2	5.75	7.1	-	-	28.5	48
	4VCF	1/2	0.37	4.15	5.00	7.06	8.50	-	-	27.5	82
	5VDF	1 1/2	1.1	8.72	10.50	14.82	17.85	-	-	27.5	82
	PCA	1.7	1.27	6	.1	10).4	125	8.8	-	-
Seperate Drive Models	PCD	1.1	0.82	4	.7	8	.0	100	7.0	-	-
	VAB	.13	0.10	1	.3	2	.2	-	-	27.5	82

6 **GAST**° www.gastmfg.com www.gastmfg.com **GAST**° 7




Rocking **Pistons**

Typical Applications

- Oxygen concentrators
- Eye surgery equipment
- Ventilation equipment
- Surgical aspiration equipment
- Dental vacuum ovens
- Dental Compressors
- Lab test equipment
- Dry Sprinkler Beverage Dispensing
- Cable Pressurization
- Vacuum Mixing
- Diving Air



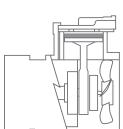

In a reciprocating motion, a flexible cup mounted on top of the connecting rod creates vacuum or pressure as the cup maintains a seal against the cylinder walls in a rocking motion.

- Oilless ideal for use in medical, dental, laboratory, and food applications
- Rugged construction
- Quiet operation
- Dual frequency motors
- Air flows up to 5.5 cfm, pressure to 175 psi and vacuum capabilities to 29.5 in-HG
- · Corrosion resistant models, tank models, and a complete line of recommended accessories available

Specifications

		Power	Rating	Free Air Flow					Maximum Pressure						Maximum Vacuum		
	Model/Series	60	Hz	CF	M	m ^s	³/h	D	C		psi			bar		Vaci	Juin
		hp	kW	50 Hz	60 Hz	50 Hz	60 Hz	cfm	m³/h	50 Hz	60 Hz	DC	50 Hz	60 Hz	DC	Hg	mbar
	LOA (SHADED POLE)	1/16	0.05	-	0.4	-	0.7	-	-	21	28.5	-	6.2	6.2	-	25.0	167.0
	LOA (PSC)	1/6	0.12	52.0	0.8	0.9	1.4	-	-	30	39	-	7.0	7.0	-	26.0	133.0
	LOA (DC)	1/10	0.07	-	-	-	-	0.6	1.1	35 - 78	43 - 55	7.0	-	-	7.0	27.0	99.0
	LAA	1/6	0.12	1.3	1.5	2.2	2.6	-	-	38	52	-	3.5	3.5	-	29.0	31.0
Standard Motor	71R (SINGLE CYL)	1/3	0.25	2.4	2.0	4.1	3.4	-	-	47 - 50	63 - 65	-	7.0	7.0	-	-	-
Mounted Models	71R (TWIN CYL)	1/3 - 3/4	0.25 - 0.56	3.3 - 4.5	4.0 - 4.5	5.5 - 7.7	6.8 - 7.7	ı	-	50	65	-	1.0 - 7.0	1.0 - 7.0	-	28.0	65.0
	71R (TWIN CYL - HIGH PRESS)	1/3 - 1/2	1.25 - 0.37	1.9	1.9	2.9	3.2	ı	-	35 - 78	40 - 105	-	12.1	12.1	-	-	-
	72R (SINGLE CYL)	1/3	0.25	2.0 - 2.5	2.5	3.4 - 4.3	4.3	-	-	150	170	-	7.0	7.0	-	28.0	65.0
	72R (TWIN CYL)	1/3 - 3/4	0.25 - 0.56	2.5 - 5.5	2.5 - 5.5	4.3 - 9.4	4.3 - 9.4	ı	-	50 - 85	30 - 110	-	1.7-7.0	1.7-7.0	-	29.0	31.0
	86R	1/4	0.19	3.2	3.8	5.4	6.5	1	-	115	100 - 125	-	8.8	8.8	-	27.5	82.0
	87R	1/2	0.37	4.1	4.8	7.0	8.2	1	-	75	95	-	8.8	8.8	-	29.5	14.0




Regenerative Blowers

Typical Applications

- Air tables
- Solution and media agitation
- Vacuum hold-down and pickup
- Air blow-off
- Soil and ground water remediation
- Carton forming and packaging
- Lab filtration
- Sewage aeration
- Materials handling
- Aquaculture
- Pneumatic conveying





A certain amount of air slips past each impeller blade during rotation and returns to the base of a succeeding blade for reacceleration -"regenerative."

- For high volume vacuum or compressed air applications
- Motor-mounted and separate drive models
- TEFC electric motors are UL and CSA certified on several models (see chart) and come in single and three-phase, dual frequency, and multi-voltage versions; 12 volt DC is available on the smallest model
- · Special models with explosion-proof motors, 1/3 to 10 HP, are designed for soil vapor extraction applications. Consult Distributor or Factory for details (not shown on chart)
- A complete line of recommended accessories available

Specifications

		Power	Rating		Free A	ir Flow		Ma	aximun	ı Press	ure	М	aximun	n Vacuu	um
	R1 R2 R3 R4 R4P R5 R6 R6P R7 R7P R9	60	Hz	CI	FM	m	³/h	р	si	b	ar	in	Hg	ml	bar
	model/ delice	hp	kW	50 Hz	60 Hz	50 Hz	60 Hz	50 Hz	60 Hz	50 Hz	60 Hz	50 Hz	60 Hz	50 Hz	60 Hz
	R1	1/8	0.09	23	27	39	46	21	28.5	50	71	20	26.5	50	66
	R2	1/3, 1/2	0.25, 0.37	33	42	56	71	30	39	75	97	25	35	62	87
	R3	1/2	0.37	43	52 - 53	88 -90	31 - 40	35 - 78	43 - 55	77 - 100	107 - 137	28 - 35	40 - 50	70 - 87	100 - 125
	R4	1	0.75	74	92	126	156	38	52	95	130	34	48	85	120
Standard Motor Mounted	R4P	1 1/2	1.1	110	127	187	216	47 - 50	63 - 65	117 - 125	157 - 162	43 - 45	59 - 60	107 - 112	147 - 149
Models	R5	2 1/2	1.86	133	160	226	272	50	65	125	162	47	60	117	149
	R6	1 1/2 - 5	1.86 - 3.73	180	215	306	365	35 - 78	40 - 105	87 - 194	100 - 262	45 - 70	45 - 88	112 - 174	112 - 219
	R6P	5 1/2	4.1	235 - 245	280 - 290	399 - 416	476 - 493	50 - 85	30 - 110	125 - 212	75 - 274	60 - 70	35 - 90	149 - 174	87 - 224
	R7	10	7.46	350	420	595	714	115	100 - 125	286	249 - 311	90	95 - 110	224	237 - 274
	R7P	18	13.4	666	795	1132	1351	90	105	224	262	85	95	212	237
	R9	15	11.3	4.7	680	994	1155	125	125	311	311	105	115	262	286
	R9P	30	22.4	585	1350	1937	2294	110	125	274	311	100	110	249	274
High Pressure Motor Mounted Models	R4H	6	4.5	107	128	182	217	277	284	690	707	184	184	457	457
Separate Drive	SDR4	4	3.0	1-	47	1:	28	1	82	2	17	2	77	28	84
Models	SDR5	10	7.5	2	40	2	65	3	65	4	50	1-	45	1	70

8 **GAST**° www.gastmfg.com




Vacuum Generators

Typical Applications

- Envelope insertion/extraction
- Evacuation of volatile vapors
- Aspiration
- Carton forming
- Robotic pick and place
- Any number of other vacuum applications where pump size, noise level, or high-temperature environment are considerations





As compressed air is forced through a conical nozzle, its velocity increases and pressure decreases. Gast vacuum generators operate on this venturi principle, which creates vacuum without a single moving part.

- Excellent for those vacuum applications where a regular vacuum pump may not be preferred
- 27 chemical and corrosion resistant models
- Single or multi-stage designs offer several options
- Compact, lightweight construction
- Low air consumption
- No moving parts quiet operation Minimal maintenance
- Low operating cost
- Vacuum cups in flat and bellows, threaded or "slip fit" mounting options available, with diameters from 1/4 to 5 7/8 in

Specifications

	Model/Series	Free A	ir Flow	Maximun	ı Vacuum	Air Consumption
Single-Stage	Metric Models Have MG Prefix Instead Of VG	CFM @ 0" HG	m³/h @ 1000 mbar	inHg	mbar	CFM at Suggested Air Pressure
High Vacuum Series	VG-010-00-00	0.95	1.6	26	133	1.60 @ 30-75 psi
	VG-015-00-00	2.2	3.7	27	99	3.50 @ 30-75 psi
	VG-020-00-00	4	6.8	27	99	6.40 @ 30-75 psi
	VG-065-00-00	6.8	11.6	27	99	2.7 @ 68 psi
Multi-Stage High Vacuum Series	VG-130-00-00	12	20.4	27	99	4.9 @ 68 psi
g racaa cocc	VG-260-00-00	17	28.9	26	133	7.0 @ 68 psi
Multi-Stage (Combination)	VG-260-02-00	36	61.1	26	133	14 @ 68 psi
High Performance And Severe-Duty	VG-260-04-00	71	120.6	26	133	28 @ 68 psi




Tank **Systems**

Typical Applications

- Dry sprinkler systems
- Beverage dispensing
- Lab use
- Medical/dental clinics
- Hospitals





Tanks systems are designed to make small pumps do big jobs and are a natural extension of the GAST air compressor and vacuum pump lines.

- Provides pulse free air
- Can prolong pump life
- Quiet operation
- Can help reduce maintenance and replacement cost
- Oilless operation
- ASME pressure safety valves and tanks available
- UL listed tank systems for dry sprinkler applications available
- Complete line of recommended accessories available

Specifications

		Power Rating				Free Ai	r Flow		Tank	Size	Max Pressure		Weight	
	Model	60	Hz	Operating Voltage	50	Hz	60	Hz	gallons	liters	psiq	bar	lbs	kg
		hp	kW		cfm	l/min	cfm	I/min	yallulis	IIICIS	psiy	Dai	INS	ky
	1HAB-11T-M100X	1/6	0.12	115-60-1	-	-	1.3	2.2	2	7.57	100	7	49	22
	1HAB-94T-M100X	1/6	0.12	115-60-1	-	-	1.3	2.2	2	7.57	100	7	49	22
	1HAE-11T-M104X	1/6	0.12	220/230-50-1	1.3	2.2	•	-	2	7.57	100	7	49	22
	1LAA-11T-M100X	1/6	0.12	115-60-1	-	-	1.5	2.5	2	7.57	100	7	49	22
	2HAH-92T-M200X	1/4	0.19	115-60-1	-	-	1.7	3			100	7		
	2LAF-11T-M200X	1/4	0.19	115-60-1	-	-	2.1	3.6	2	7.57	50	3.5	55	25
	3HBB-11T-M300AX	1/3	0.25	115-60-1	-	-	2.4	4.0	12	45.42	100	7	93	42
Standard Tank	3HBB-13T-M300AX	1/3	0.25	115-60-1	-	-	2.4	4.0	2	7.57	100	7	93	42
Systems	3HBE-11TF-M303X	1/3	0.25	208/230-50-60-1	2.4	4.0	2.4	4.0	12	45.42	100	7	93	42
	3LBA-11T-M300AX	1/3	0.25	115-60-1	-	-	3.1	5.0	12	45.42	50	3.5	93	42
	4LCB-11T-M450X	1/2	0.37	115/230-60-1	-	-	4.2	6.9	20	75.71	50	3.5	118	54
	5HCD-11T-M550NGX	3/4	0.56	115/230-60-1	4.7	7.9	4.7	-	20	75.71	100	70	121	55
	5LCA-11T-M550NGX	3/4	0.56	115/230-60-1	5.4	8.6	5.4	-	20	75.71	50	3.5	109	49
	6LCF-11T-M616NEX	1	0.75	115/230-60-1	6.3	10.7	6.3	-	30	113.56	50	3.5	125	57
	7HDD-11TA-M750X	1 1/2	1.1	115-208/230-60-1	-	-	9	15.3	30	113.56	100	7	155	70
	7LDE-11T-M750X	1 1/2	1.1	115-208/230-60-1	-	-	10.2	17.3	30	113.56	50	3.5	155	70
	8HDM-11TD-M853	2	1.5	220/240-380/440, 230/460-50-60-3	11	187	11	187	30	113.56	100	7	155	70
	8LDF-11TA-M850X	2	1.5	115/230-50-60-1	9.1	15.5	12.04	20.7	30	113.56	50	3.5	80	36.3

	Max. Gallons in System to		Free Air Flow	Power	Operating Voltage	Dime	nsions (Ir	iches)	Pipe	Shipping	
	Pump to 40 PSI in 30 min. In support of NFPA Standard 13	Model Number	at 40 PSI (CFM)	Rating (HP)	Frequency (HZ)	Α	В	С	Size (In. NPT)	Weight (lbs)	Tank Size
	90	1LAA-46T-M100GX	1.0	1/6	115-60-1	19	17	9	1/4	44	2
	150	2LAF-46T-M200EX	1.6	1/4	115-60-1	26	24	13.5	1/4	78	12
Tank Units For Dry Sprinkler	180	3LBA-46T-M300AX	2.0	1/3	115-60-1	26	23	13.5	1/4	80	12
Systems	300	4LCB-46T-M450GX	3.1	1/2	115/230-60-1	33	27	16	1/4	109	20
	400	5LCA-46T-M550GX	4.7	3/4	115/230-60-1	33	27	16	1/4	115	20
	600	6LCF-46T-M616NEX	5.9	1	115/230-60-1	38	28.2	17	3/8	169	30
	800	7LDE-46T-M750X	7.9	1 1/2	115/208-230-60-1	38	28.6	17	3/8	185	30
	1000	8LDF-46T-M850X	8.84	2	115/230-50-60-1	38	29.1	17	3/8	200	30

www.gastmfg.com **GAST**° 11 10 **GAST** www.gastmfg.com



Our genuine parts and service provide you the quality, durability, and dependability you have come to expect from GAST. Simplify repairs, maximize life and performance, and tailor your products with our proven aftermarket solutions.

GENUINE PARTS & SERVICE



Parts

Replace with confidence using manufacturer-certified components

- · Critical individual parts to ensure against the unexpected
- Multi-pack offerings on common wear items for maximum value

Kits

Eliminate the guesswork and fix it right the first time

- Preventative maintenance kits to keep your product running smoothly
- · Repair kits to get you back up and running quickly

Accessories

Taylor and protect your product's performance

- Accessories that adapt GAST products to your specific applications
- · Genuine GAST lubricants and filters to extend life and maximize performance

Service

Leverage our global Authorized Service Center network for warranty, service, and training

- Guaranteed worldwide warranty repair through Authorized Service Centers
- · Customized refurbishment and training programs to meet your needs

AMERICAS

Headquarters

GAST Manufacturing, Inc. 2300 M-139 Highway Benton Harbor, MI 49023

Office: 269-926-6171 Tech: 269-934-1130 Fax: 269-927-0808

EMEA

GAST Group Ltd.

Unit 11, The 10 Centre Nash Road Redditch, B98 7AS United Kingdom

Phone: +44 (0) 1527 50 40 40 Fax: +44 (0) 1527 52 52 62

APAC

GAST Group Ltd.

Room 3502-3505 No. 1027 Chang Ning Road, Zhaofeng Plaza Shanghai, China 200050

Phone: +86-21-52415599 ext. 302 Fax: +86-21-52418339 ext. 302

Pictorial and dimensional data is subject to change without notice. The information presented is based on technical data and test results of nominal units. It is believed to be accurate and is offered as an aid in the selection of Gast products. It is the user's responsibility to determine suitability of the product for intended use and the user assumes all risk and liability whatsoever in connection therewith. Environmental and application conditions may affect advertised life

