


INTRODUCING GAST 87R-10BA SYSTEM

Clean, Quiet, Powerful

The GAST 87R-10BA was designed specifically for use in modern "bag-in-a-box" beverage dispensing applications. The 87R-10BA provides an economical and safe alternative to expensive and cumbersome CO² bottle gas for dispensing.

Built on GAST's workhorse, the 87R, an oil-free rocking piston compressor renown for it's quiet and trouble free operation.

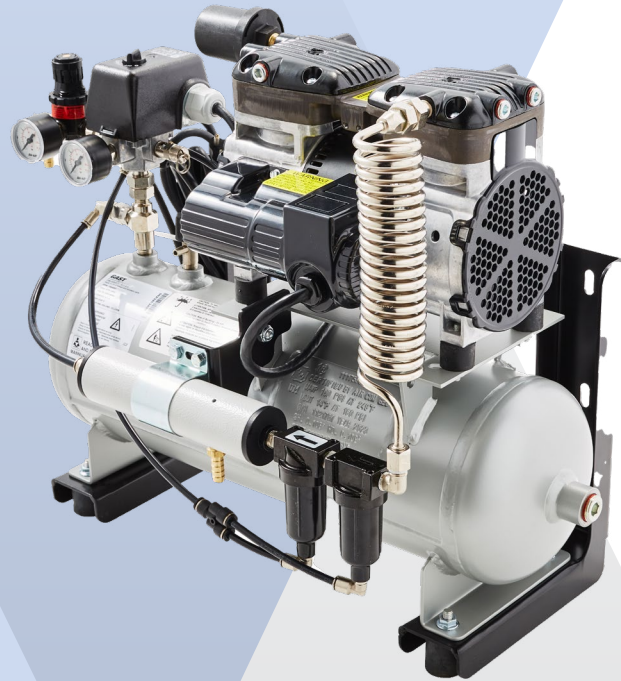

CLEAN

The 87R-10BA is an oil-less rocking piston design, so there is no need to handle or dispose of lubricating oil. Additionally, the included filtration and cooling provide moisture free air for the most demanding pneumatic applications.



POWERFUL

The 87R-10BA provides an impressive 2.9 CFM (81 LPM) of open air flow and 1.0 CFM (27 LPM) at 116 psi to ensure more than enough air capacity for beverage dispensing along with other potential pneumatic needs on site.



QUIET



GAST's 87R compressor is widely heralded for its quiet operation. It boasts impressive sound performance of 65 dBA or less. Additionally, the unit includes vibration dampers to ensure nearby staff are undisturbed during run time.



ECONOMICAL

By eliminating the need to use CO² bottles for liquid dispensing, the 87R-10BA offers an easily implemented solution for long term savings.

87R-10BA SYSTEM

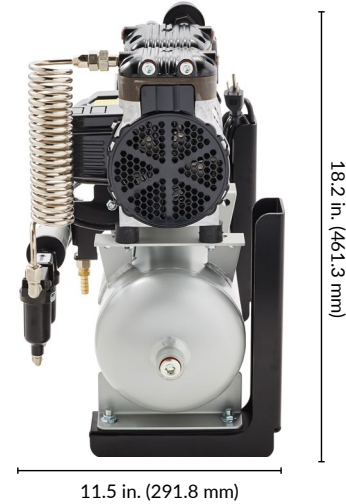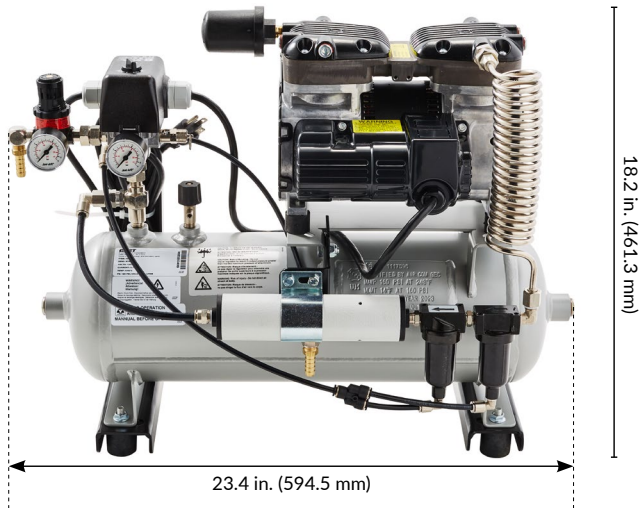

87R-10BA SYSTEM

Operating Pressure Setpoints	90-116 psi [6.2-8 bar]
Horsepower	0.5
Running Amps	5.7
Operating Voltage, 60 Hz	120
Open Air Flow	2.9 cfm [81 lpm]
Flow at 116 psi	1.0 cfm [27 lpm]
System Weight	51 lbs [23 kg]
Cup Life @ stated pressure setpoints	4,000 hrs
Bearing Life @ stated pressure setpoints	16,000 hrs

GAST MANUFACTURING, INC.
A Unit of IDEX Corporation
2300 M-139 Highway, Benton Harbor, MI 49022
Office: 269-926-6171 | Tech: 269-934-1130